

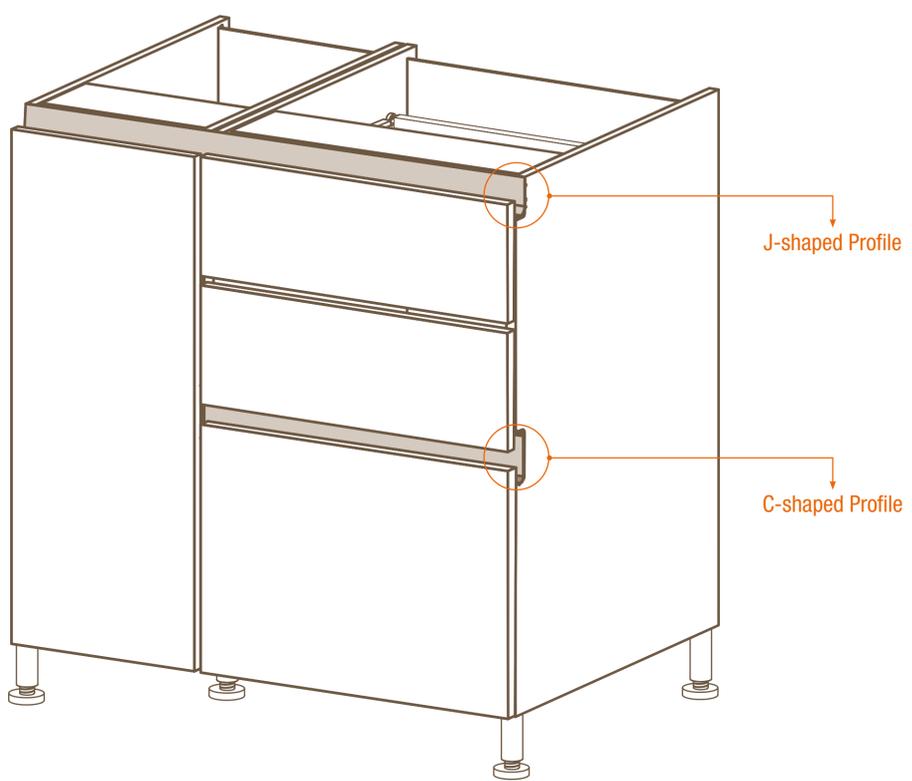


**GOLA PROFILE ASSEMBLY**

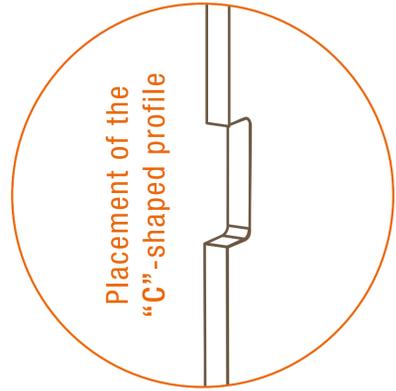


The upper "J"-shaped gola profile is installed continuously along all the cabinets. The "C"-shaped profile is installed on the lower drawers.


**1** The verticals have guide holes where the brackets that adjust the profiles are screwed in.

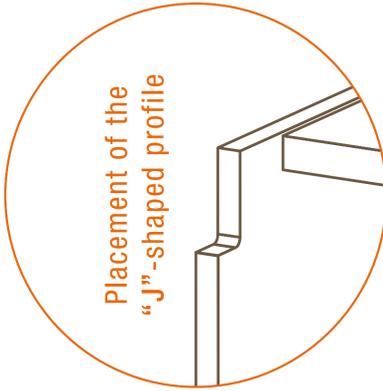

**2** Install two brackets for each cabinet that is joined and shares the same profile strip as shown in the image. Before positioning the profile on the cabinets, you should have the total quantity of brackets required for all the connected cabinets.

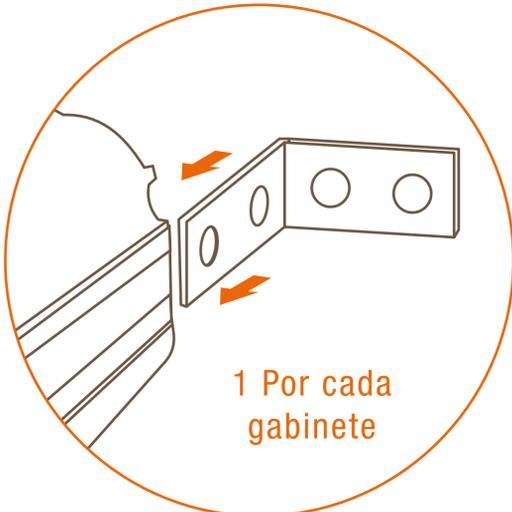

**3** Position the aluminum profile over the cabinets and secure one bracket on each side panel of every cabinet. In total, there should be two brackets on each connected cabinet. Use the small self-drilling screw, placing it in the guide hole.

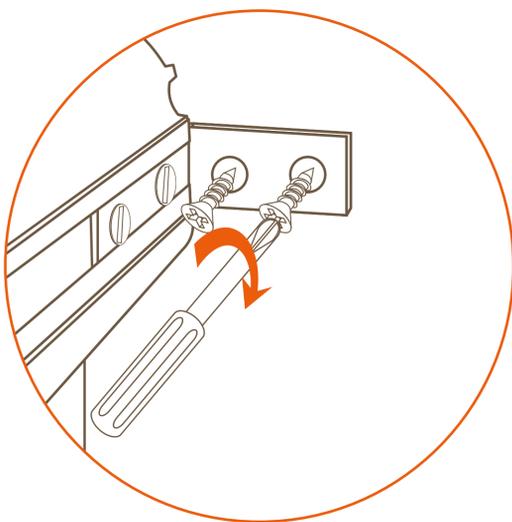

**4** Once a bracket is installed on each side panel of the cabinets, secure them to the aluminum profile. Use the flat-head screw.

