



CABINET TYPE	WALL	WA-W: 12"- 33"
--------------	-------------	-----------------------

Apply for references: W12 / W15 / W18 / W21
W24 / W27 / W30 / W33

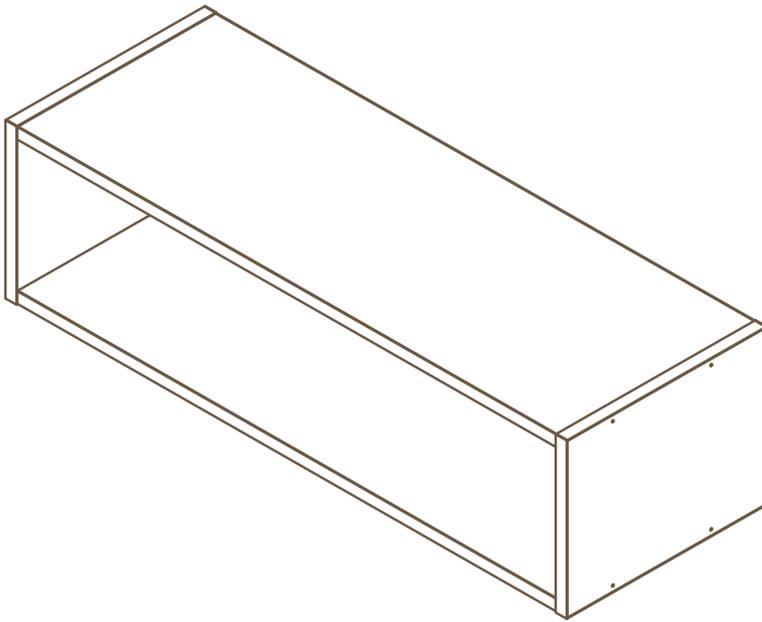

HARDWARE INCLUDED	TOOLS LIST REQUIRED
	<input checked="" type="checkbox"/>
Dowels	Manual screw drivers
	<input checked="" type="checkbox"/>
Screws	Electric screw driver with tork control
	<input checked="" type="checkbox"/>
	Rubber hammer
	<input checked="" type="checkbox"/>
	Hammer
	<input checked="" type="checkbox"/>
	Personal safety equipment
	 

CABINET PARTS

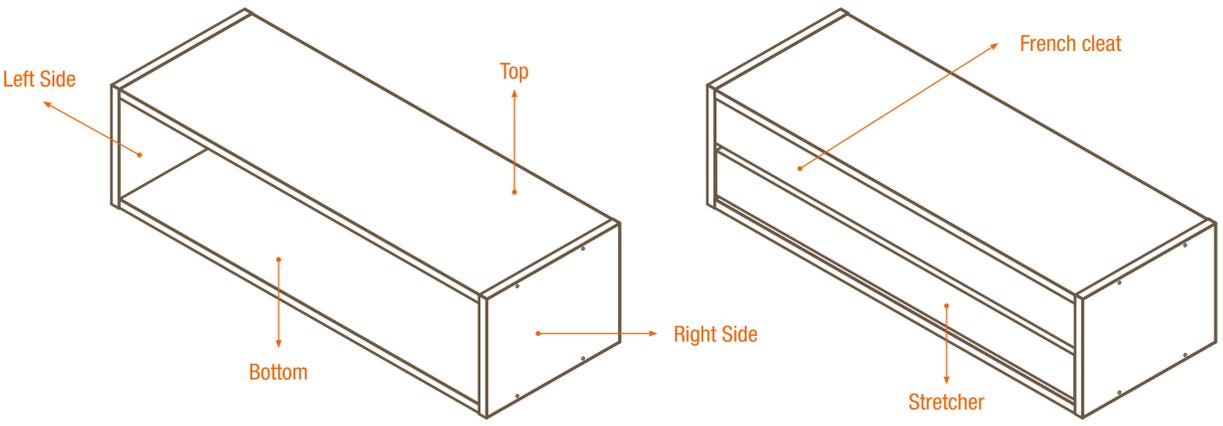

ASSEMBLE DIRECTIONS

- Assemble the cabinet between two or more people.
- It is recommended to assemble lying on the floor.

STEP	PIECE	ASS. HARDWARE	AD. HARDWARE	INSTRUCTION
1	Left Side	• Dowels • Screws to hold all together		• Assemble
2	Bottom	• Dowels • Screws from Sides		• Assemble
3	French cleat (x2)	• Dowels • Screws from Sides		• Assemble: One of the pieces must be assembled to the cabinet, and the other anchored to the wall.
4	Right Side	• Dowels • Screws to hold all together		• Assemble
5	Backpanel			• Assemble
6	Top	• Dowels • Screws from Sides		• Assemble

For additional assembly instructions, hardware manuals, and installation guidelines, please refer to the following link: <https://milestone.com.co/instructions/>

WARNING

Carefully read the manufacturer's instructions before starting assembly to avoid mistakes and damage.

- **Pre-assemble the pieces on a flat, protected surface** to prevent scratches, dents, or deformations during the process.
- When unpacking, if damaged or defective parts are found, **please report those that affect the assembly of the cabinet and its aesthetic presentation.**
- **Verify that all parts and hardware are complete and in good condition** before beginning the assembly.
- **Avoid applying excessive force to fit pieces;** use the appropriate tools to prevent damage or deformation.
- **Keep the pieces aligned and level** during assembly to ensure proper fit and functionality of the final product.
- **Secure fasteners and screws firmly but without over-tightening** to avoid damaging the materials or joints.
- **Do not make holes or modifications other than those indicated in the instructions** to avoid weakening the structure or voiding the warranty.
- **Handle the more delicate or heavy components,** such as countertops or doors, with care to prevent damage or accidents.
- **Perform the assembly in a clean, dry, and dust-free area** to protect materials, especially those with wood or melamine finishes.